



User's Guide

63-1032

Indoor/Outdoor **Wired Thermometer/  
Hygrometer**



*Thank you for purchasing your Thermometer/  
Hygrometer from **RadioShack**. Please read this  
user's guide before installing, setting up, and  
using your new meter.*

## Check package contents

- Meter
- User's Guide
- Quick Start

## Features

- Big LCD display is easy to read
- Indoor and outdoor temperature display

### ① Install Battery

1. Remove the battery cover.
2. Place one AAA battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the battery cover.



### Battery Notes:

- *Dispose of battery promptly and properly. Do not burn or bury it.*
- *Use only a fresh battery of the required size and type.*

- *If you do not plan to use the meter for a week or more, remove the battery. Batteries can leak chemicals that can damage electronic parts.*

## ② Mount or stand the meter

Keyhole slot for hanging on a wall. Use a small screw.

Extend the 9.8-ft. sensor cord out under a window for use outdoors.

To use the unit on a flat surface, flip down the stand.



### ③ Use the meter

Indoor temperature

Outdoor temperature

Indoor humidity

Show maximum and minimum recorded indoor temperatures.

Toggle between the maximum or minimum recorded humidity.

Clear displayed records from memory.

Toggle between Celsius and Fahrenheit.



## Specifications

Indoor temp. range .....	32 to 122°F (0 to 50°C)
Outdoor temp. range.....	-58 to 158°F (-50 to 70°C)
Temperature resolution.....	0.1°F (0.1°C)
Relative humidity range .....	20% to 95% RH
Compensation for humidity.....	32°F to 140°F (0°C to 60°C)
Power source.....	1 × AAA battery
Weight (without battery) .....	0.22 lb (100 g)
Dimensions (H x W x D).....	5.5 × 2.9 × 0.6 in (140 × 75 × 15 mm)
LCD display size.....	2.3 × 1.6 in (40 × 58 mm)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

## Limited Warranty

**RadioShack** warrants this product against defects in materials and workmanship under normal use by the original purchaser for **one (1) year** after the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless

otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

**RADIOSHACK** EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact **RadioShack** at:

**RadioShack** Customer Relations  
300 RadioShack Circle, Fort Worth, TX 76102

04/08



Protect the environment by recycling used electronics.  
Go to [E-CyclingCentral.com](http://E-CyclingCentral.com) to find a recycling center near you.

©2009. **RadioShack** Corporation.  
All rights reserved. **RadioShack** and  
**RadioShack.com** are trademarks used by  
**RadioShack** Corporation.

Printed 07A09  
in China 63-1032